

Lam Classic RUI Operation

— Accessories:

RUI *1ea , RUI cable *1 set, Splitter*1ea



RUI



RUI cable



Splitter


Step 1:

- a. Take off the connector (853-220012-001,60B2P3) on the Video Board (605-016005-002),then connect it to **Splitter J3**
- b. **Splitter P3** connect to Video Board P3
- c. Take off the VGA cable (P1) from the Video Board ,then connect it to **Splitter Monitor 1**
- d. **Splitter P1** connect to Video Board P1





Before

AFTER

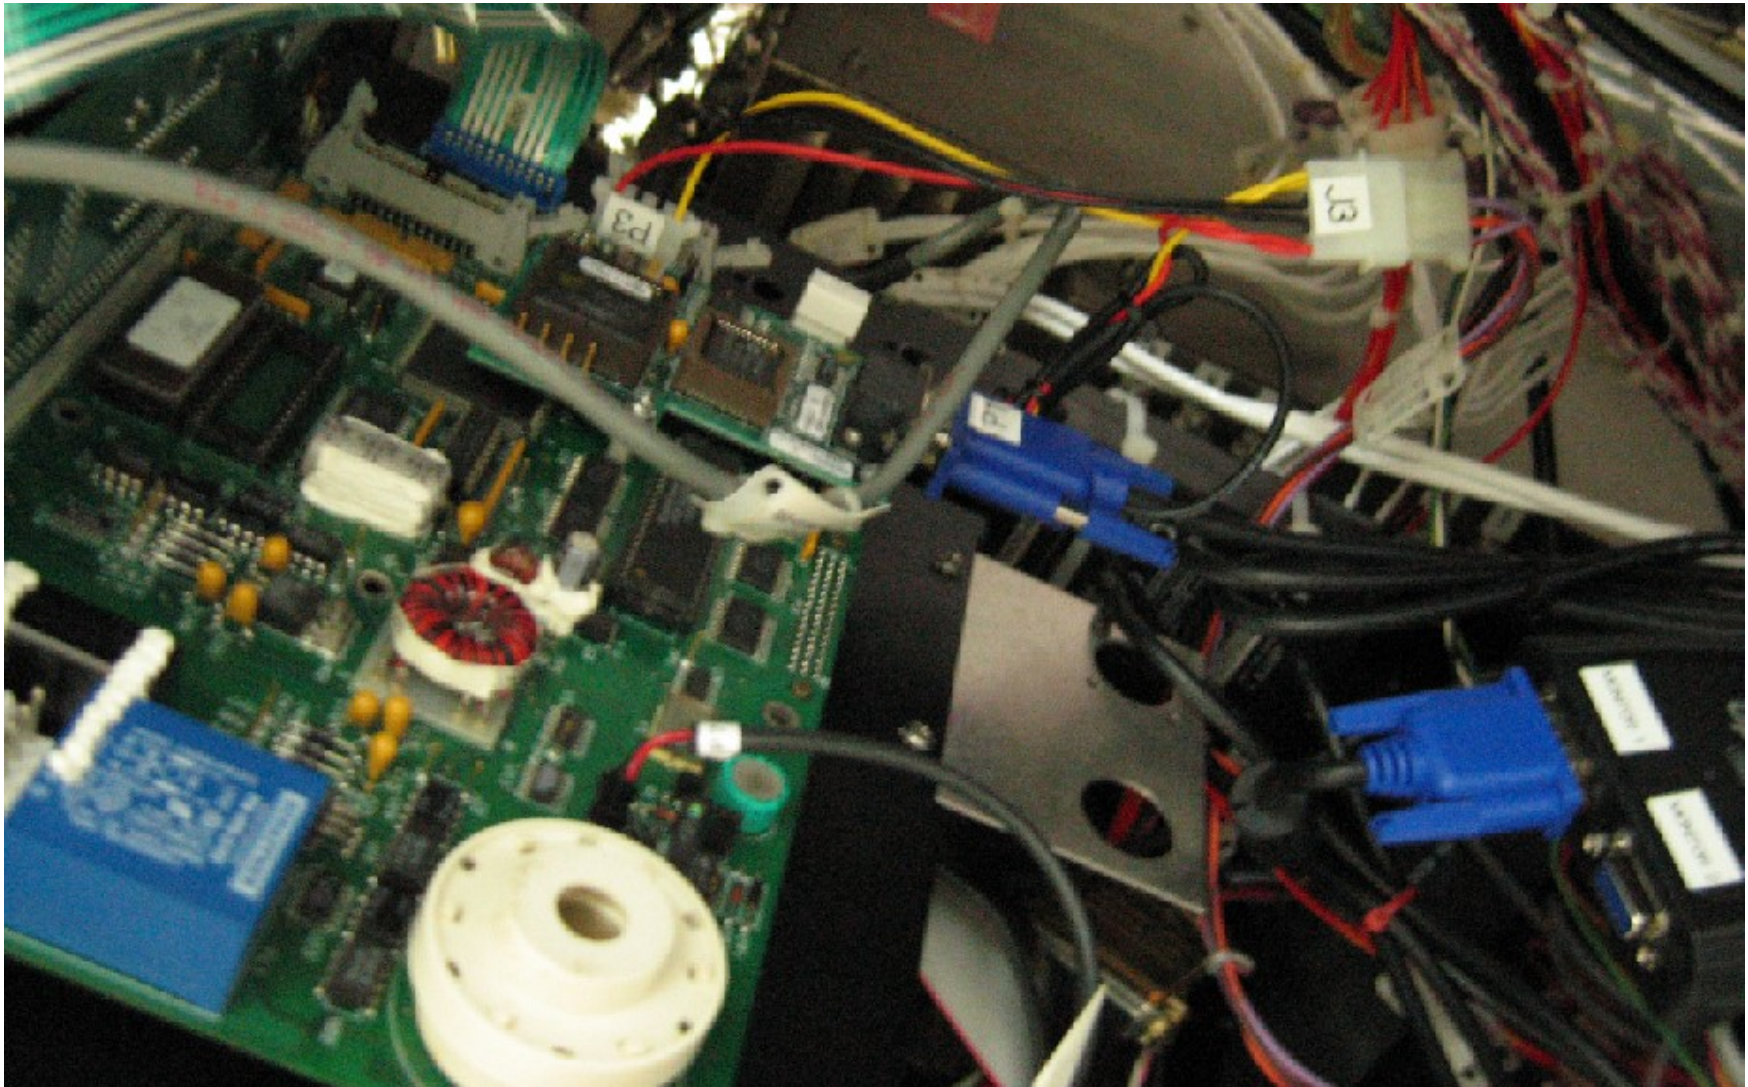

Step 2:

- a. Take off Keypad cable from connector P5, then connect to **RUI cable J5**, there is a **triangle mark** align to **Keypad Pin 1**.
- b. **RUI cable P5** connect to **Video Board P5**, **triangle mark** align to P5 Pin 1 .

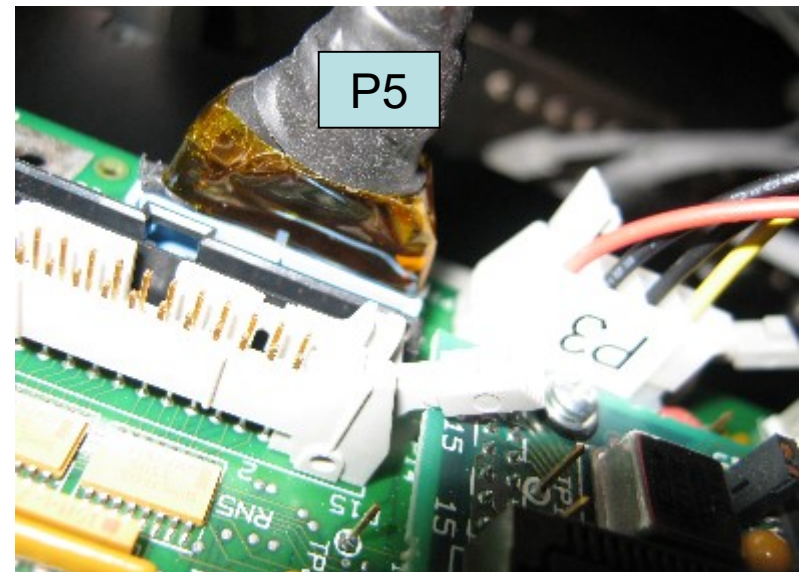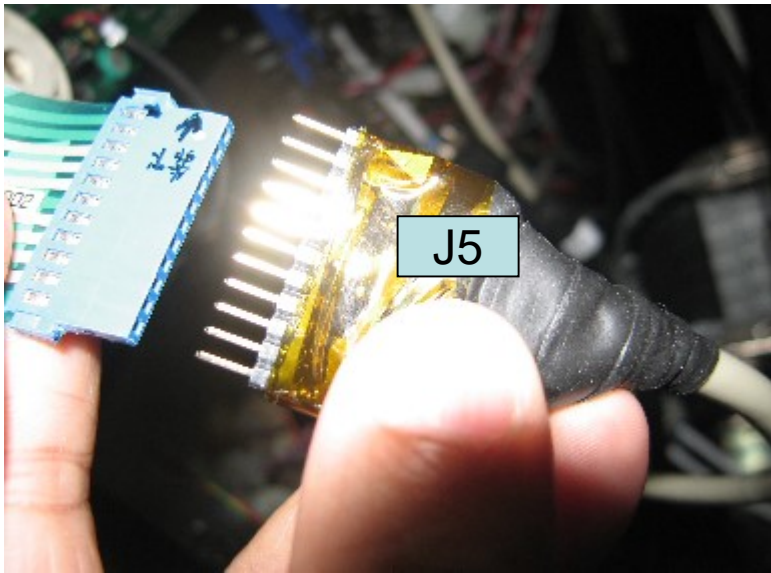

Step 3:

- a. RUI cable Monitor 2 connect to Splitter Monitor 2
- b. RUI cable connect to RUI, turn on RUI power switch



Step 4:

- a. Switch to Rear Keypad (RUI), you can operate the machine from RUI .
- b. Switch to Front Keypad (RUI), you can operate the machine from main operation interface.



Note:

If you do not use the RUI ,you must connect
RUI cable 's connector (RUI P1 to RUI J1)

