

Lam Envision RUI Operation

— Accessories:


RUI *1ea , KVM cable *1 set, Transfer Box *1 ,CAT.5E cable *1ea



RUI Rear



Transfer Box

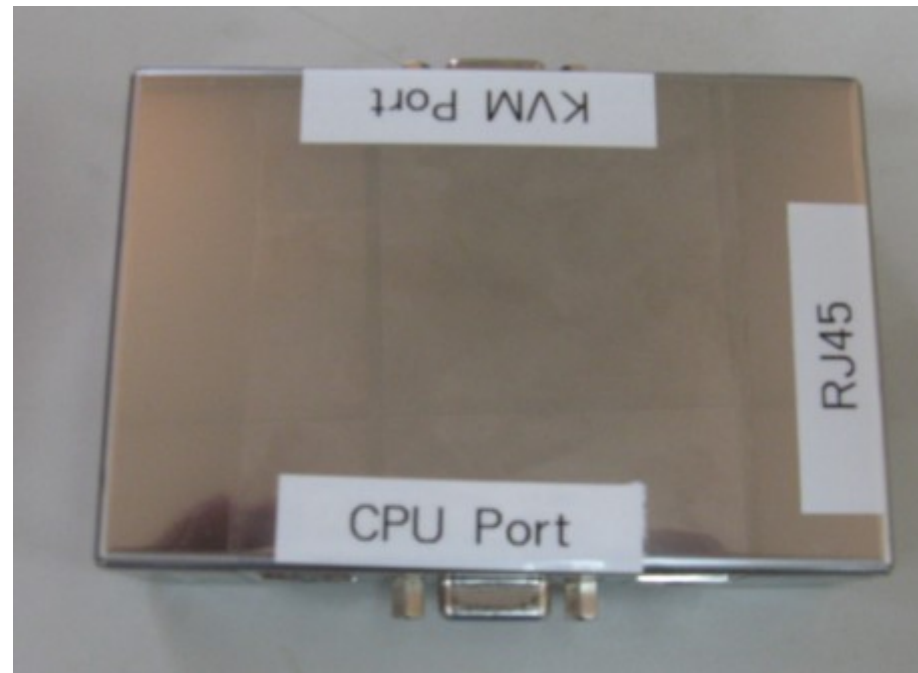

Simulation Lam Envision CPU



Step 1: Turn off Lam CPU

Step 2: Take off the Lam CPU's mouse ,Keyboard and monitor VGA cable

Step 3: KVM cable connect to Lam CPU and the other side connect to **Transfer Box (CPU Port)**

Step 4: Connect the original Lam CPU mouse ,Keyboard and monitor VGA cable to **Transfer Box(KVM port)**

Step 5: Connect the **Cat.5E cable** to **Transfer Box RJ45 port** and **RUI RJ45 port**

Step 6: Connect the mouse or Trace ball to RUI and power on the RUI

Step 7: Turn on the Lam CPU

Then you can enjoy use the Lam Envision RUI

